D810

NINJA 2

Congratulations!

You have one of the most powerful filmmaking combinations in the industry.



Setup for the Nikon D810

Note: remove the HDMI cable from the Nikon D810 before setup

- Enable HDMI out: Press the Menu button > Setup Menu > HDMI > Output Resolution > Set to AUTO This will ensure a compatible video frame rate for the NINJA 2
- Set the correct color level for SMPTE: Setup Menu > HDMI > Advanced > Output Range > Set to LIMIT Which will give you the correct color for accurate SMPTE TV color standard
- Enable 100% display: Setup Menu > HDMI > Advanced > Output Display Size > Set to 100% This ensures a full HD output to the NINJA 2 (No cropping)
- Turn off Live View display info: Setup Menu > HDMI > Advanced > Live View On-Screen Display > Set to OFF Turning this OFF will ensure menus and text aren't recorded onto the NINJA 2
- Turn off the delay limit of the display: Custom Setting Menu > c Timers / AE lock > c4 Monitor Off Delay > Live View > Set to NO LIMIT Disables power saving mode (always on) and bypasses 30 min record limit when ONLY using the NINJA 2
- Select your recording format: Shooting Menu > Movie Settings > Frame Size / Frame Rate > Set to 1920x1080; 24p / 1920x1080; 25p / 1920x1080; 30p (50p / 60p Not Supported)
- Exit the Menu and switch to Movie mode using the dail near the Info button









Setup for the NINJA 2

- Plug the HDMI cable into the Nikon D810 and the Ninja to get a signal
- The recording format should match the D810! D810 1920x1080;24p > Ninja 2 1080p23.98 TIP: Touch the top left hand input to match the D810 setting
- Insert a SSD / HDD* into the NINJA 2 and format the drive before recording Touch the bottom right hand corner on the hard drive icon > Format HDD/SSD > Format *SSD/HDD sold separately - refer to http://www.atomos.com/discovery-what-drives/ for recommended drives
- **Press** to record









